

CCC, CQC, CB, CE, TUV
Molded Case Circuit Breakers



NDM5-125 series
1、Applicable scope and purpose

The NDM5-125 series of moulded case circuit breakers (referred to as circuit breakers) have a rated insulation voltage of 800V and apply to circuits with the AC 50Hz/60Hz, the rated working voltage AC230V/AC240V,AC380V/AC400V/AC415V and rated working current (1.5A to 125A). The circuit breakers are used for distributing power while protect the overload, short circuit and under-voltage (with a under-voltage release) of lines and power units as well as the infrequent starting, braking, overload and short circuit of motors.

The circuit breaker has an isolating function with the corresponding symbol of —|—X—; Comply with standards: IEC60947-2, GB/T 14048.2.

Each voltage level and short-circuit section capacity of the circuit breaker can be connected with the lower incoming line.

2 、 Picture of the product



Fig.1 Product picture

3、 Specification and model description

Table with 13 columns (1-13) and 5 rows. Row 1: ND M 5 - 125. Row 2: S.N., Name of S.N., Interpretation. Row 3: 1 Enterprise characteristic code ND:Nader low-voltage apparatus. Row 4: 2 Product type code M:Moulded case circuit breaker (MCCB). Row 5: 3 Design S.N. 5. Row 6: 4 Current of the 125.

|   |                                  |                                                                                                                             |
|---|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
|   | frame size                       |                                                                                                                             |
| 5 | Interrupting level code          | L:standard                                                                                                                  |
|   |                                  | M:medium-high                                                                                                               |
|   |                                  | H:high                                                                                                                      |
| 6 | Rated current                    | 1.5,2.5,6,10,12.5,16,20,25,32,40,50,63,80,100,125                                                                           |
| 7 | Pole                             | 2:2 poles                                                                                                                   |
|   |                                  | 3:3 poles                                                                                                                   |
|   |                                  | 4A:N-pole is without the over-current protection and always connect                                                         |
|   |                                  | 4B:N-pole is without the over-current protection and acts together with other three poles(N-pole close first and open last) |
|   |                                  | 4C:N-pole is with the over-current protection and acts together with other three poles(N-pole close first and open last)    |
|   |                                  | 4D:N-pole is without the over-current protection and always connect                                                         |
| 8 | Trip release code                | MF: Magnetic only fixed release                                                                                             |
|   |                                  | MA: Magnetic only adjustable release                                                                                        |
|   |                                  | TMD: AC protection-thermo-magnetic distribution release                                                                     |
|   |                                  | TMM: Thermo-magnetic motor release                                                                                          |
| 9 | Installation code+ Wiring method | Null: Stationary connector + front panel wiring                                                                             |
|   |                                  | ES: Stationary connector+ front extension wiring board                                                                      |
|   |                                  | R0: Stationary connector + screw connector +on after terminal                                                               |
|   |                                  | Fcu: Stationary connector +front bare copper cable wiring                                                                   |
|   |                                  | G: Guide rail type+ front panel wiring(2Pexcept)                                                                            |
|   |                                  | GES: Guide rail type+ front extension wiring board(2Pexcept)                                                                |
|   |                                  | GFcu: Guide rail type+ front bare copper cable wiring(2Pexcept)                                                             |
|   |                                  | P0FH: plug-in without secondary connector +horizontal wiring in front of board                                              |
|   |                                  | P0RH: plug-in without secondary connector + horizontal wiring behind the board                                              |
|   |                                  | P0RV: plug-in without secondary connector +rear vertical wiring                                                             |
|   |                                  | P1FH: plug-in without secondary connector + horizontal wiring in front of board                                             |
|   |                                  | P1RH: plug-in without secondary connector + horizontal wiring behind the board                                              |
|   |                                  | P1RV: plug-in without secondary connector + rear vertical wiring                                                            |

|    |                  |                                                                           |
|----|------------------|---------------------------------------------------------------------------|
| 10 | Operation method | Null: directly handle operation                                           |
|    |                  | Z1A150:rotary handle with round center hole and square axis length 150mm  |
|    |                  | Z1A200:rotary handle with round center hole and square axis length 200mm  |
|    |                  | Z1A300:rotary handle with round center hole and square axis length 300mm  |
|    |                  | Z1A350:rotary handle with round center hole and square axis length 350mm  |
|    |                  | Z1A650:rotary handle with round center hole and square axis length 650mm  |
|    |                  | Z1F150:rotary handle with round square hole and square axis length 150mm  |
|    |                  | Z1F200:rotary handle with round square hole and square axis length 200 mm |
|    |                  | Z1F300:rotary handle with round square hole and square axis length 300mm  |
|    |                  | Z1F350:rotary handle with round square hole and square axis length 350mm  |
|    |                  | Z1F650:rotary handle with round square hole and square axis length 650mm  |
|    |                  | M02:motor operation DC24V                                                 |
|    |                  | M11:motor operation AC110V/DC110V                                         |
|    |                  | M22:motor operation AC230V/DC220V                                         |
|    |                  | M40:motor operation AC400V                                                |
| 11 | Accessory code   | See table 2                                                               |
| 12 | Other codes      | J:Mechanical interlocking(2P except)                                      |
|    |                  | MS2: MS2 lock(2P except)                                                  |
| 13 | Application code | EPT                                                                       |

Note: (1) 1.5A-12.5A Only magnetic protection, 1.5A-2.5A magnetic fixation 12In, 6A-12.5A magnetic adjustable(7-8-9-10-11-12-13-14)In;

(2) 16A-80A TMD type magnetic fixation 10In; 16A-80A TMM type magnetic fixation 14In.

Table 2 Accessory code

| Accessory code | Accessory code                                                                | Installation position |      |
|----------------|-------------------------------------------------------------------------------|-----------------------|------|
|                |                                                                               | 2P                    | 3/4P |
| —              | None                                                                          | —                     | —    |
| 08             | Alarm contact                                                                 |                       |      |
| 10             | Shunt release                                                                 |                       |      |
| 30             | Under-voltage release                                                         |                       |      |
| 21             | Single auxiliary contact                                                      | —                     |      |
| 61             | Two sets of single auxiliary contacts                                         | —                     |      |
| 23             | Three sets of single auxiliary contacts                                       | —                     |      |
| 18             | Shunt release, alarm contact                                                  |                       |      |
| 38             | Under-voltage release, alarm contact                                          |                       |      |
| 22             | Single auxiliary contact, alarm contact                                       | —                     |      |
| 88             | Two sets of single auxiliary contacts, alarm contact                          | —                     |      |
| 26             | Three sets of single auxiliary contacts, alarm contact                        | —                     |      |
| 42             | Shunt release, single auxiliary contact, alarm contact                        | —                     |      |
| 44             | Shunt release, two sets of single auxiliary contacts, alarm contact           | —                     |      |
| 46             | Shunt release, three sets of single auxiliary contacts, alarm contact         | —                     |      |
| 75             | Under-voltage Release, single auxiliary contact, alarm contact                | —                     |      |
| 77             | Under-voltage release, two sets of single auxiliary contacts, alarm contact   | —                     |      |
| 81             | Under-voltage release, three sets of single auxiliary contacts, alarm contact | —                     |      |
| 41             | Shunt release, single auxiliary contact                                       | —                     |      |
| 11             | Shunt release, two sets of single auxiliary contacts                          | —                     |      |
| 12             | Shunt release, three sets of single auxiliary contacts                        | —                     |      |
| 71             | Under-voltage release, single auxiliary contact                               | —                     |      |
| 72             | Under-voltage release, two sets of single auxiliary contacts                  | —                     |      |
| 73             | Under-voltage release, three sets of single auxiliary contacts                | —                     |      |

Note: ■ Single auxiliary contact; □ Alarm contact; ● Shunt release; ○ Under-voltage release.

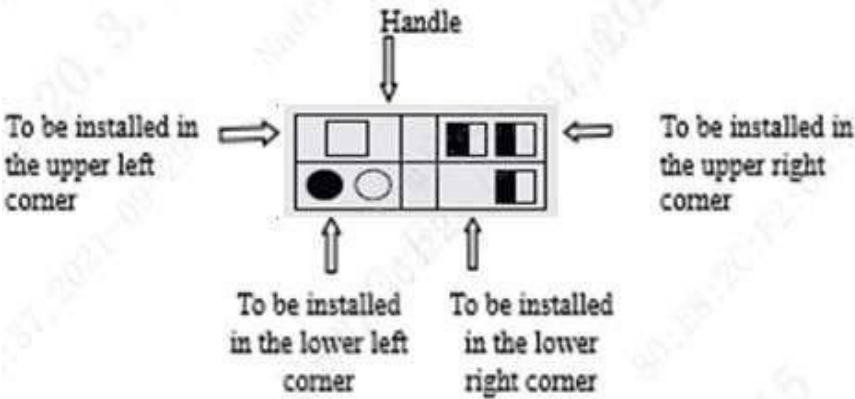


Fig.2 Attachment installation diagram

4、Main technical parameters

Table 2 Main technical parameters

|                                                             |                 |                         |                                                                 |       |     |     |     |     |     |     |     |     |
|-------------------------------------------------------------|-----------------|-------------------------|-----------------------------------------------------------------|-------|-----|-----|-----|-----|-----|-----|-----|-----|
| Frame current Inm (A)                                       |                 |                         | 125A                                                            |       |     |     |     |     |     |     |     |     |
| Rated current In (A)                                        |                 |                         | 1.5, 2.5, 6, 10, 12.5, 16, 20, 25, 32, 40, 50, 63, 80, 100, 125 |       |     |     |     |     |     |     |     |     |
| Rated voltage Ue (V)                                        |                 |                         | AC230/240, AC380/400/415                                        |       |     |     |     |     |     |     |     |     |
| Usage category                                              |                 |                         | A                                                               |       |     |     |     |     |     |     |     |     |
| Rated impulse withstand voltage Uimp (V)                    |                 |                         | 8000                                                            |       |     |     |     |     |     |     |     |     |
| Rated insulation voltage Ui (V)                             |                 |                         | 800                                                             |       |     |     |     |     |     |     |     |     |
| Power frequency withstand voltage (1min) (V)                |                 |                         | 3000                                                            |       |     |     |     |     |     |     |     |     |
| Rated Ultimate Short-circuit breaking capacity Icu/Ics (kA) |                 | Number of poles         |                                                                 | 2     |     |     | 3   |     |     | 4   |     |     |
|                                                             |                 | Interrupting level code |                                                                 | L     | M   | H   | L   | M   | H   | L   | M   | H   |
|                                                             |                 | AC230/AC240V            |                                                                 | 100   | 120 | 150 | 100 | 120 | 150 | 100 | 120 | 150 |
|                                                             |                 | AC380/400/415V          |                                                                 | /     | /   | /   | 70  | 100 | 150 | 70  | 100 | 150 |
|                                                             |                 | AC230/AC240V            |                                                                 | 100   | 120 | 150 | 100 | 120 | 150 | 100 | 120 | 150 |
|                                                             |                 | AC380/400/415V          |                                                                 | /     | /   | /   | 70  | 100 | 150 | 70  | 100 | 150 |
| Operational performance (times)                             | Mechanical life | Maintainable free life  |                                                                 | 20000 |     |     |     |     |     |     |     |     |
|                                                             |                 | Maintainable life       |                                                                 | 40000 |     |     |     |     |     |     |     |     |
|                                                             | Electrical life | AC230/AC240V            |                                                                 | 10000 |     |     |     |     |     |     |     |     |
|                                                             |                 | AC380/400/415V          |                                                                 | 10000 |     |     |     |     |     |     |     |     |

|                        |                                                                                   |       |                       |
|------------------------|-----------------------------------------------------------------------------------|-------|-----------------------|
| Boundary dimension     |  | L(mm) | 135                   |
|                        |                                                                                   | W(mm) | 61(2P)/90(3P)/120(4P) |
|                        |                                                                                   | H(mm) | 80                    |
| Flashover distance(mm) |                                                                                   | ≤50   |                       |

Note: The overall dimension does not include the dimension of terminal cover.

#### 4.1 Sectional area and applicable rated current adopted in wiring

Table 3 Wire parameters

|                                  |           |     |            |    |    |       |    |    |     |     |
|----------------------------------|-----------|-----|------------|----|----|-------|----|----|-----|-----|
| Rated current (A)                | 1.5,2.5,6 | 10  | 12.5,16,20 | 25 | 32 | 40,50 | 63 | 80 | 100 | 125 |
| Conductor area(mm <sup>2</sup> ) | 1         | 1.5 | 2.5        | 4  | 6  | 10    | 16 | 25 | 35  | 50  |

#### 4.2 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

Table 4 Tightening Torque of the Circuit Breaker Terminal and Mounting Screw

| Model | Thread specification | Torsional moment (N·m) |
|-------|----------------------|------------------------|
| 125   | M6                   | 6                      |
|       | M4                   | 1.2                    |

#### 4.3 Derating factor of temperature change for the circuit breaker

Table 5 Derating Factor Table of Temperature Change for the Circuit Breaker

| Model    | Derating factor of product temperature change |     |      |      |      |      |      |      |
|----------|-----------------------------------------------|-----|------|------|------|------|------|------|
| NDM5-125 | Temperature (°C)                              | 40  | 45   | 50   | 55   | 60   | 65   | 70   |
|          | Derating factor                               | 1.0 | 0.96 | 0.92 | 0.88 | 0.84 | 0.80 | 0.75 |

Note: 1)When the operating ambient temperature is below + 40℃,the product can be used normally without derating capacity. Products 1.5A to 12.5A have no thermal protection, and do not need to reduce capacity.

2)The above derating factors are measured under the rated current of the shell frame.

#### 4.4 High altitude derating factor of circuit breaker

Table 6 Altitude drop correction factor

| Altitude (m)                           | 2000 | 2500 | 3000 | 3500 | 4000 | 4500 | 5000 |
|----------------------------------------|------|------|------|------|------|------|------|
| Working current correction coefficient | 1    | 1    | 0.98 | 0.97 | 0.95 | 0.94 | 0.93 |
| Power frequency withstand voltage (V)  | 3000 | 3000 | 2700 | 2550 | 2400 | 2300 | 2200 |
| Average insulation class (V)           | 800  | 800  | 720  | 670  | 630  | 600  | 560  |

#### 4.5 Power consumption of circuit breaker

Table 7 NDM5-125 Product current specification single phase power consumption able

| Model    | Current specification | Single phase power consumption (W) |                                          |                     |
|----------|-----------------------|------------------------------------|------------------------------------------|---------------------|
|          |                       | Front and rear wiring              | Plug in front of plate、rear board wiring | Extended row wiring |
| NDM5-125 | 125A                  | 8.6                                | 11.7                                     | 9.2                 |


Note: The above data are the single-phase loss measured under the rated current of the circuit breaker when the ring temperature is 40℃.

### 5、Normal Working Environment of Circuit Breaker


- 1) The altitude of the installation site doesn't exceed 2,500m. See the "High-altitude Derating Factor Table of Circuit Breaker" for the derating factor at the altitude;
- 2) The ambient temperature is -35℃ ~ +70℃; the average within 24 h shall not be more than +35℃. If the ambient temperature is higher than +40℃, the user needs to reduce the capacity. See the "Derating Factor Table of Temperature Change for the Circuit Breaker" for the derating factor;
- 3) Its relative humidity at an ambient temperature of +40℃ should not exceed 50%. A higher relative humidity is allowed at a lower temperature. For example, the relative humidity at 20℃ can reach 90%; for frost due to temperature change, the corresponding measures should be taken;
- 4) The product can withstand the effects of wet air, salt mist, oil mist and mould;
- 5) The installation category of the circuit breaker connected to the main loop is: Category III (power distribution and control level), The installation category of the circuit breaker not connected to the main loop is: Category II (load level);
- 6) The pollution level is Level 3;
- 7) The product should be installed in places that are free from explosive media, media corrosive to metal, insulation damaging gas, and conductive dust, which should be also avoided from snow and rain;
- 8) In case of stricter user conditions than the above description, negotiate with the manufacturer.

6、Tripping characteristics


6.1 Tripping characteristics curve under normal environment (ambient air temperature: 40℃)

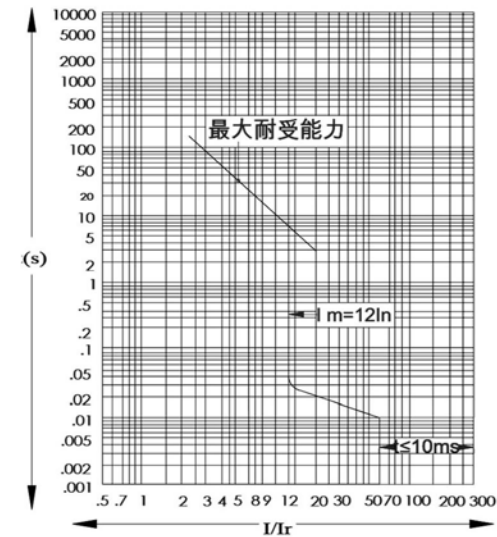


NDM5-125 Magnetic only fixed release

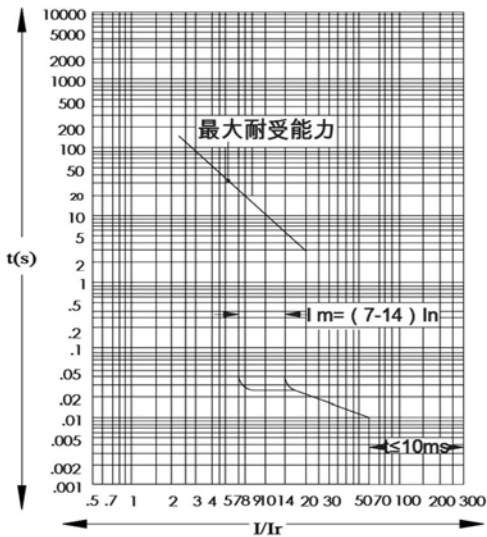

NDM5-125 Magnetic only adjustable release

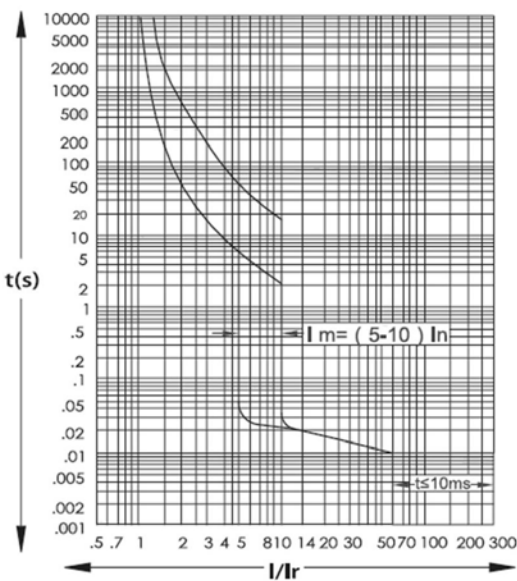

NDM5-125 Distribution Protection

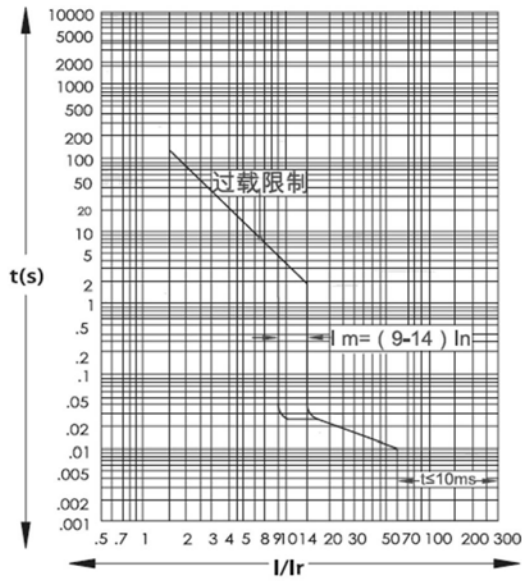

NDM5-125 Timing Protection

Fig.3 Trip curve

6.2 Current limiting characteristic curve

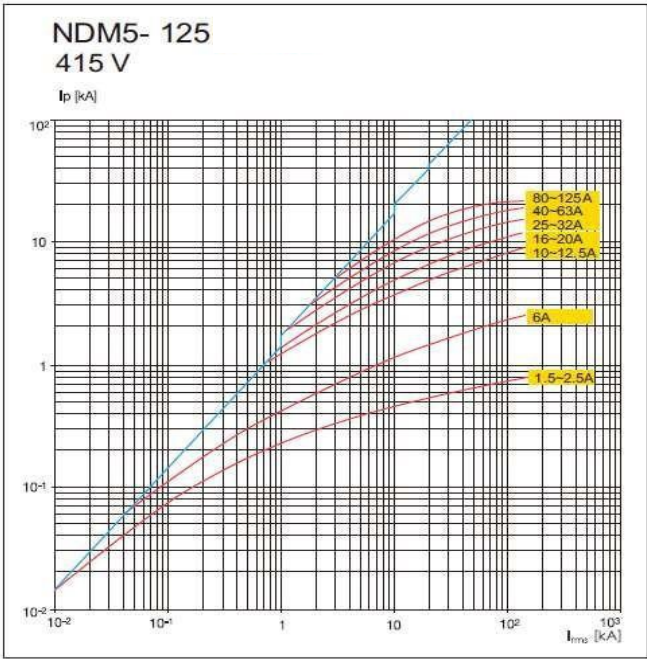


Fig.4 Current limiting characteristic curve chart

6.3 Permissive characteristic curve




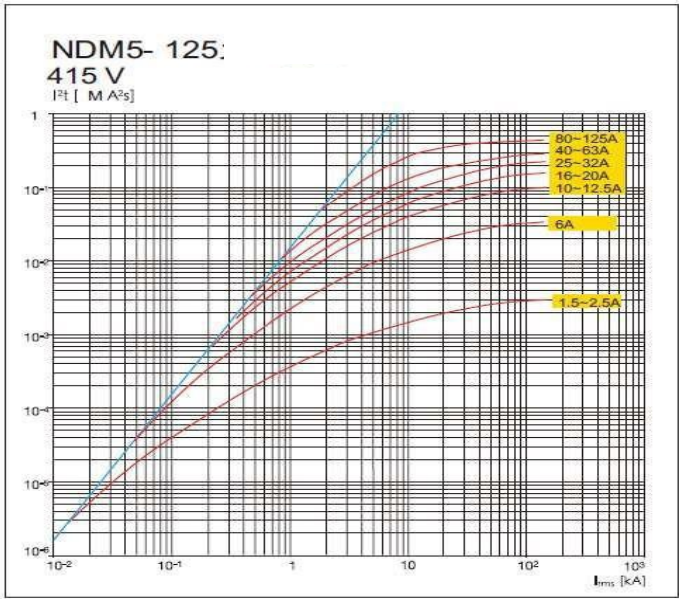


Fig.5 Permissive characteristic curve chart


7、Controller operation description and function introduction

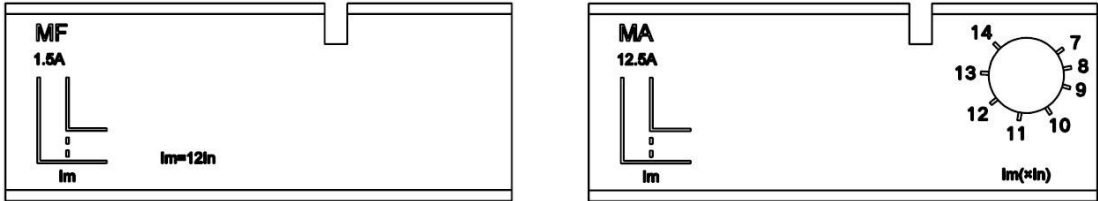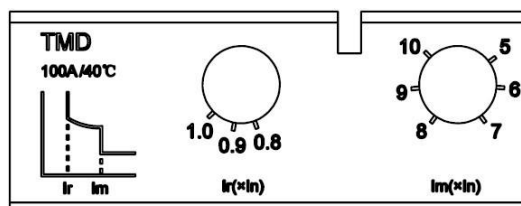


2P: 1.5A 、 2.5A MF 2P: 6A 、 10A 、 12.5A MA

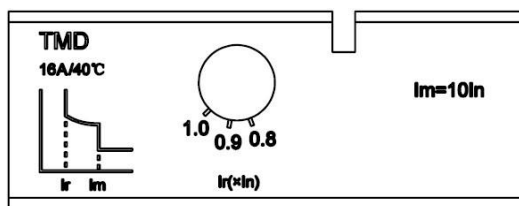


2P: 16A-80A TMD 2P: 100A-125A TMD

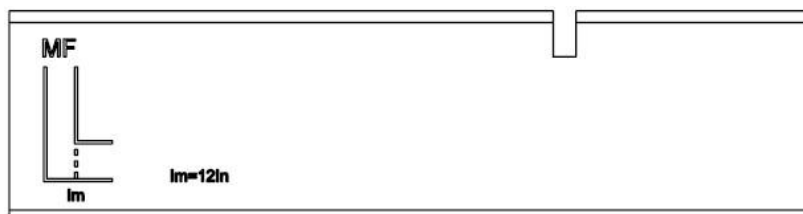


3P/4P: 1.5A、2.5A MF (TMD、TMM)

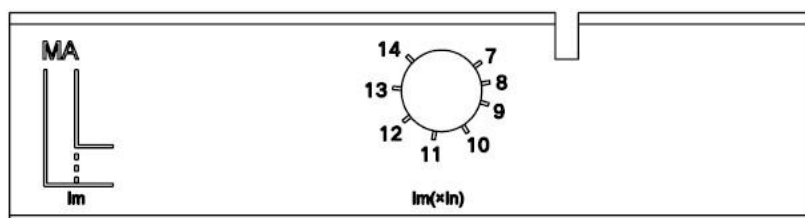


3P/4P: 6A、10A、12.5A MA (TMD、TMM)

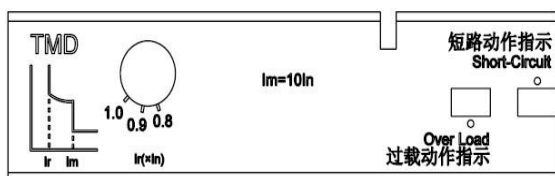


3P/4P: 16A-80A TMD

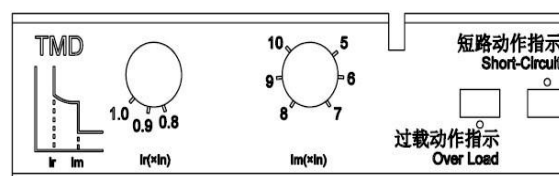


3P/4P: 100A-125A TMD

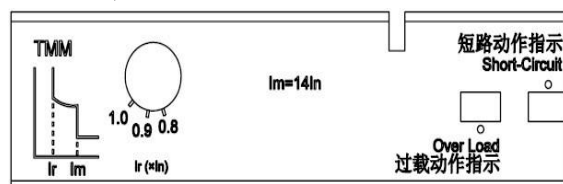

3P/4P: 16A-80A TMM

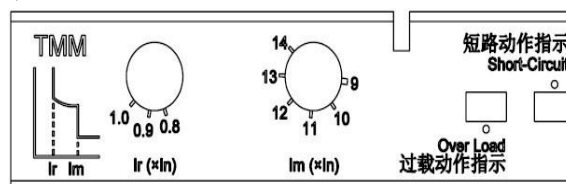

3P/4P: 100A-125A TMM

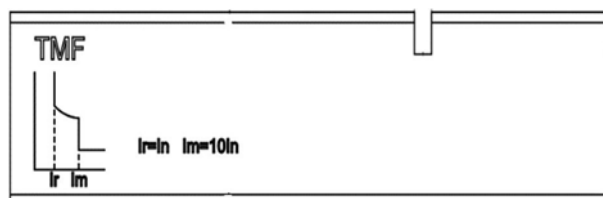

3P/4P: 16A-125A TMF

Fig.6 Release adjustment gear chart

## 8. Products Outline and Installation Dimensions

### 8.1 2P、3P、4P Outline and installation dimensions of front board wiring products

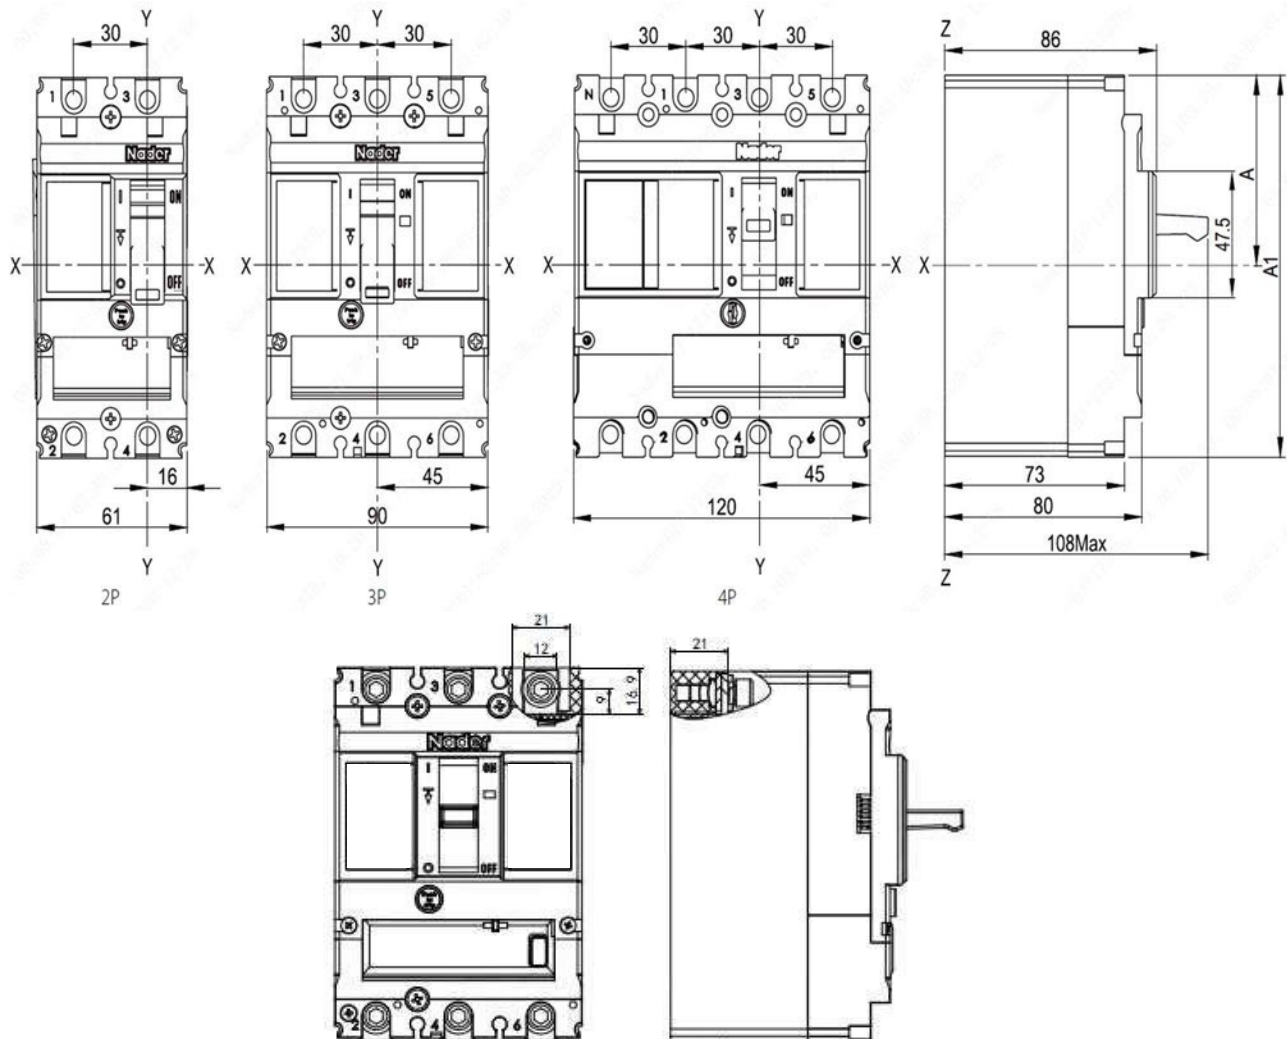


Fig.7 2P、3P、4P Overall dimensions of front board wiring products

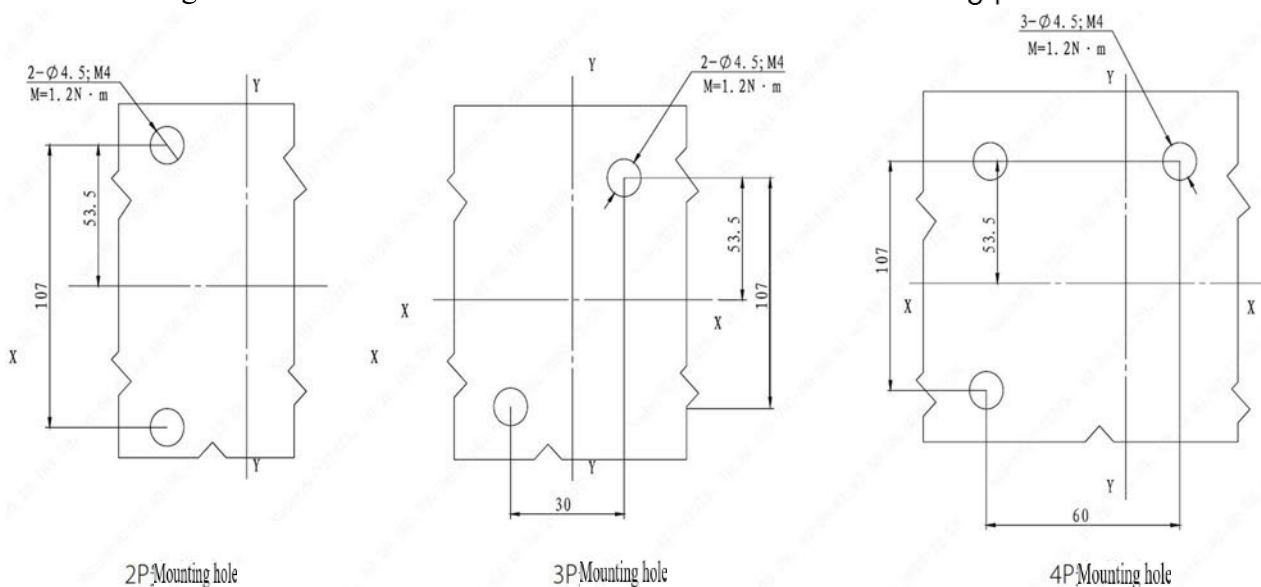



Fig.8 Mountin• hole installed on the base plate

Note 1) :Dimensions of copper bar front-Panel connection products: A=67.5, A1=135.

Dimensions of cable front-Panel connection products (Fcu): A=77.5, A1=155.

2) :Unmarked tolerance level should follow GB/T 1804-c.

## 8.2 outline and installation dimension of terminal cover

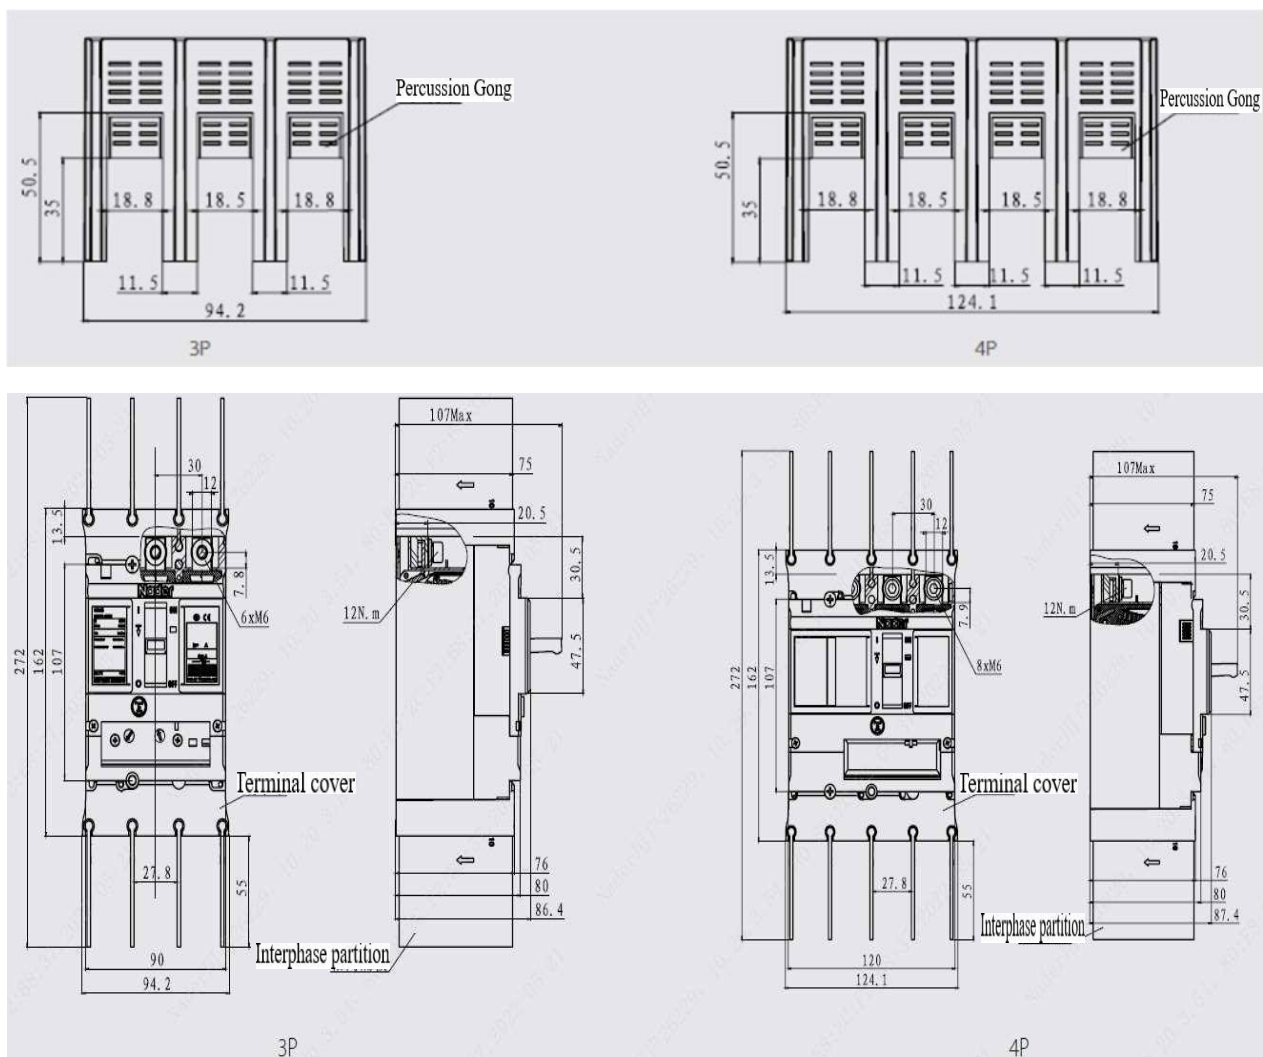

Note:Unmarked tolerance level should follow GB/T 1804-c.

8.3 Outline and installation dimensions of expansion wiring in front of the board

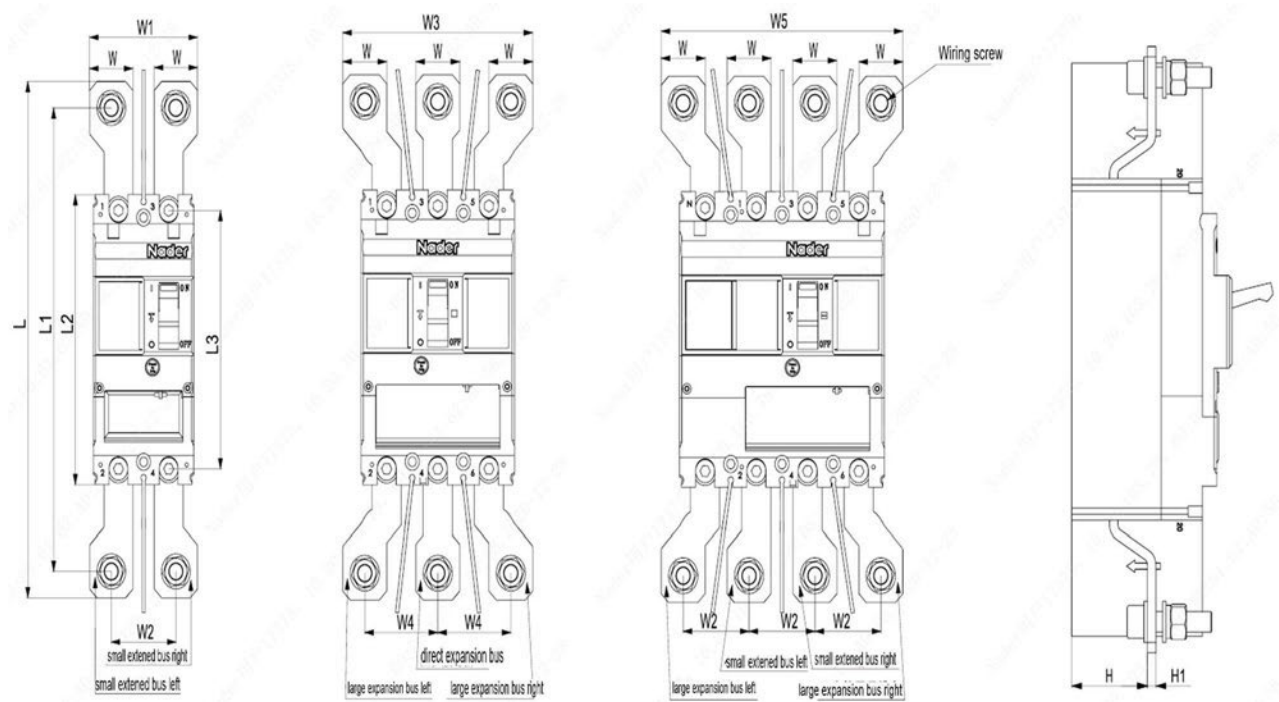


Fig.9 2P、3P、4POutline and installation dimensions of expansion wiring in front of the board

Table 8 The overall dimensions of the front wiring expansion bar and the circuit breaker after combined installation are shown in the figure below

| Extended bus | L     | L1    | L2  | L3  | W  | W1 | W2 | W3  | W4   | W5  | H  | H1 | Wiring screw(provided by the user) |
|--------------|-------|-------|-----|-----|----|----|----|-----|------|-----|----|----|------------------------------------|
| KM1/M5-160   | 244.5 | 214.5 | 135 | 119 | 30 | 76 | 45 | 130 | 52.5 | 160 | 25 | 5  | M10×40                             |

- Note 1: 2p Extended bus combination mode: small expansion bus（2 pieces on the left、right）;
- 2: 3p Extended bus combination mode: large expansion bus（2 pieces on the left、right）+2-piece direct expansion busbar;
- 3: 4p Extended bus combination mode: small expansion bus（2 pieces on the left、right）large expansion bus（2 pieces on the left、right）;
- 4: Unmarked tolerance level should follow GB/T 1804-c.

8.4 2P、3P、4P、Outline and installation dimension of rear wiring board

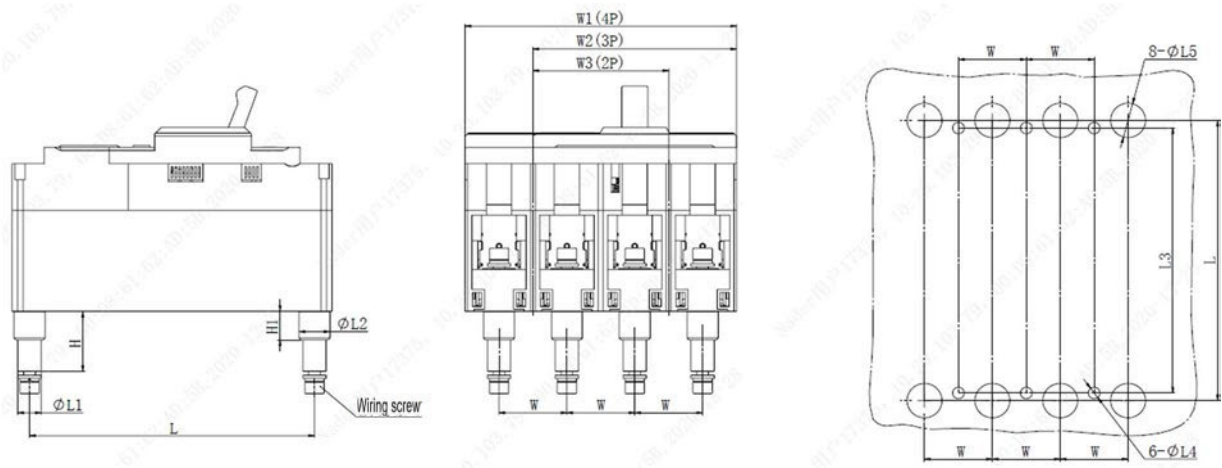


Fig.10 2P、3P、4P outline dimension drawing of rear wiring board

Table 9 2P、3P、4P the installation dimensions of wiring products behind the board are shown in the table below

| Pear panel wiring | L   | L1 | L2   | L3  | L4 | L5 | H    | H1 | H2 | W  | W1  | W2 | W3 | Wiring screw(provided by the user) |
|-------------------|-----|----|------|-----|----|----|------|----|----|----|-----|----|----|------------------------------------|
| BH1/M5-160        | 119 | 10 | 13.5 | 107 | 5  | 15 | 33.5 | 10 | 25 | 30 | 120 | 90 | 61 | M6×16                              |

Note: Unmarked tolerance level should follow GB/T 1804-c.

8.5 Outline and installation dimensions of plug-in board front wiring

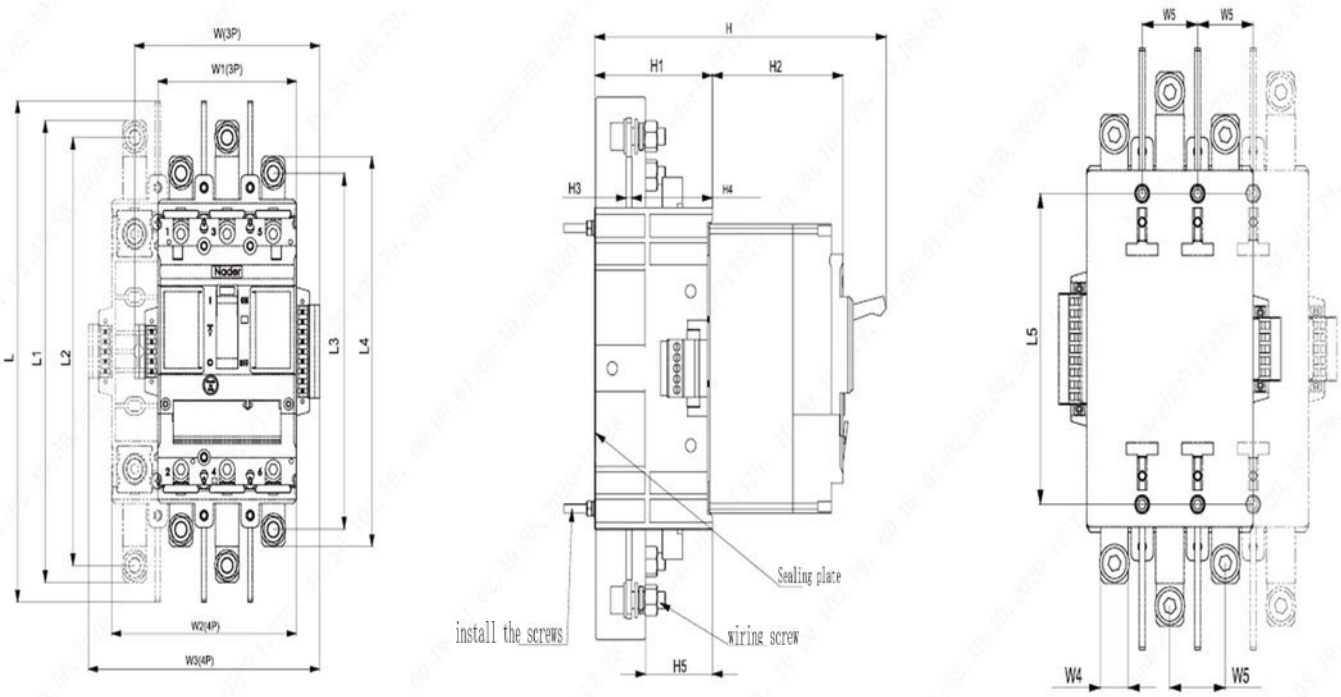


Fig.11 External dimensions of plug-in front-panel connection

Table 10 The overall dimensions of plug-in board front wiring (horizontal) and circuit breaker after installation are shown in the figure below

|                       | W   | W1  | W2  | W3  | W4 | W5 | L   | L1  | L2  | Wiring screw       |
|-----------------------|-----|-----|-----|-----|----|----|-----|-----|-----|--------------------|
| CR1-Q/M5-160          | 121 | 90  | 120 | 151 | 15 | 30 | 253 | 233 | 216 | M8×25              |
| Plug in specification | L3  | L4  | L5  | H   | H1 | H2 | H3  | H4  | H5  | Install the screws |
| CR1-Q/M5-160          | 180 | 197 | 131 | 175 | 71 | 79 | 3   | 49  | 40  | M4×75              |

Note: Unmarked tolerance level should follow GB/T 1804-c.

### 8.6 3P、4P Mounting hole dimensions of plug-in connections

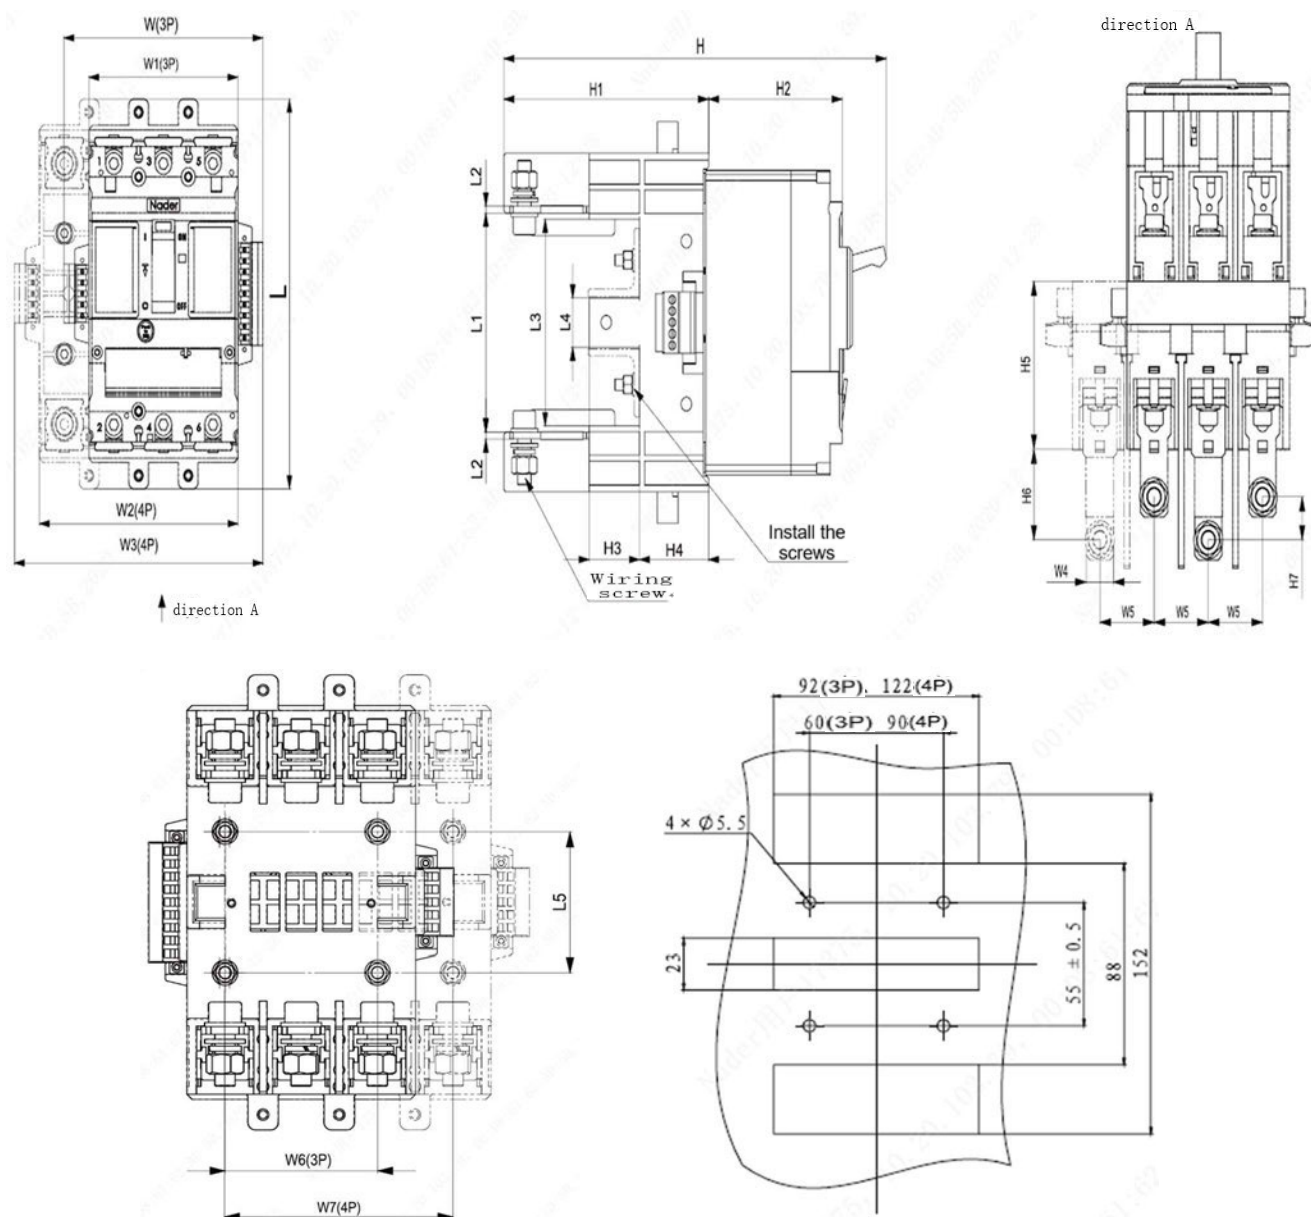


Fig.12 3P、4P Mounting hole dimensions of plug-in connections

Table 11 The overall dimensions of plug-in device(horizontal wiring behind the board)and circuit breaker after installation are shown in the table below

| Plug in board rear wiring | W   | W1 | W2  | W3  | W4  | W5 | W6 | W7 | L   | L1 | L2 | Wiring screw       |
|---------------------------|-----|----|-----|-----|-----|----|----|----|-----|----|----|--------------------|
| CR1-H/M5-160              | 121 | 90 | 120 | 151 | 15  | 30 | 60 | 90 | 178 | 97 | 3  | M8×25              |
| Plug in board rear wiring | L3  | L4 | L5  | H   | H1  | H2 | H3 | H4 | H5  | H6 | H7 | Install the screws |
| CR1-H/M5-160              | 91  | 22 | 55  | 225 | 120 | 79 | 29 | 41 | 70  | 38 | 18 | M5×35              |

Note: Unmarked tolerance level should follow GB/T 1804-c.

8.7 3P、4P Outline and installation dimensions of guide rail type safety rotation products

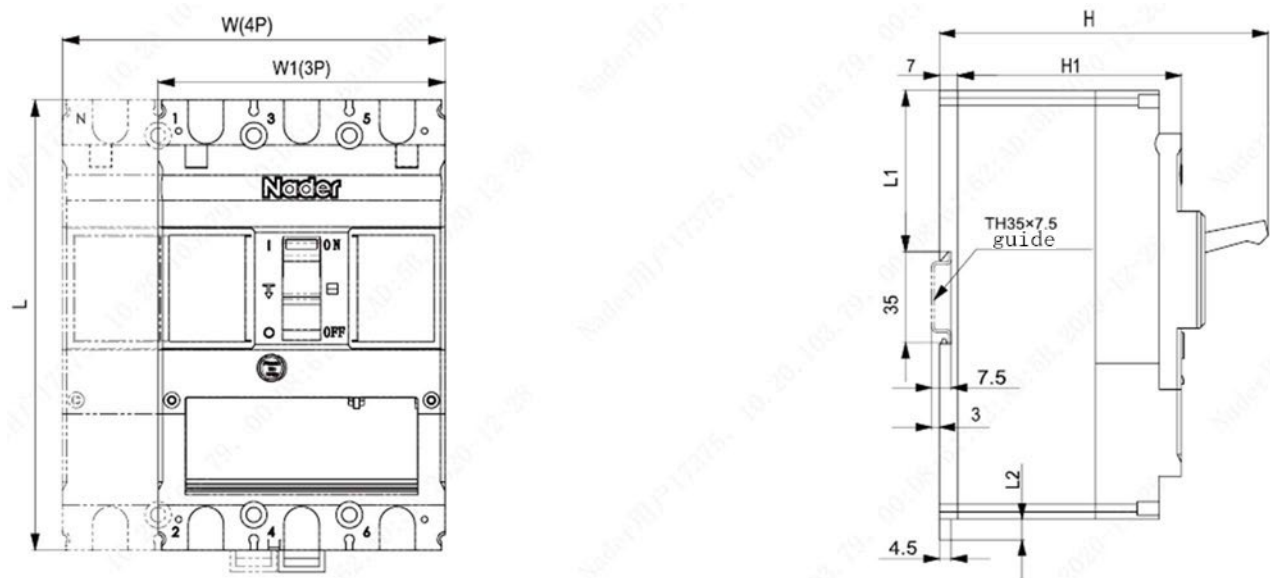


Fig.13 3P、4P Outline and installation dimensions drawing of guide rail type safety rotation products

Table 12 The installation dimensions of guide rail type safety rotation products are shown in the figure

| IN-Rail Mounting | W   | W1 | L   | L1 | L2  | H   | H1 |
|------------------|-----|----|-----|----|-----|-----|----|
| DK1/M5-160       | 120 | 90 | 135 | 50 | 5.3 | 106 | 80 |

Note: Unmarked tolerance level should follow GB/T 1804-c.

8.8 Rotary handle operating mechanism

Manual operation-the schematic diagram of handle installation and opening and the outline dimension diagram of manual operation are shown below respectively :

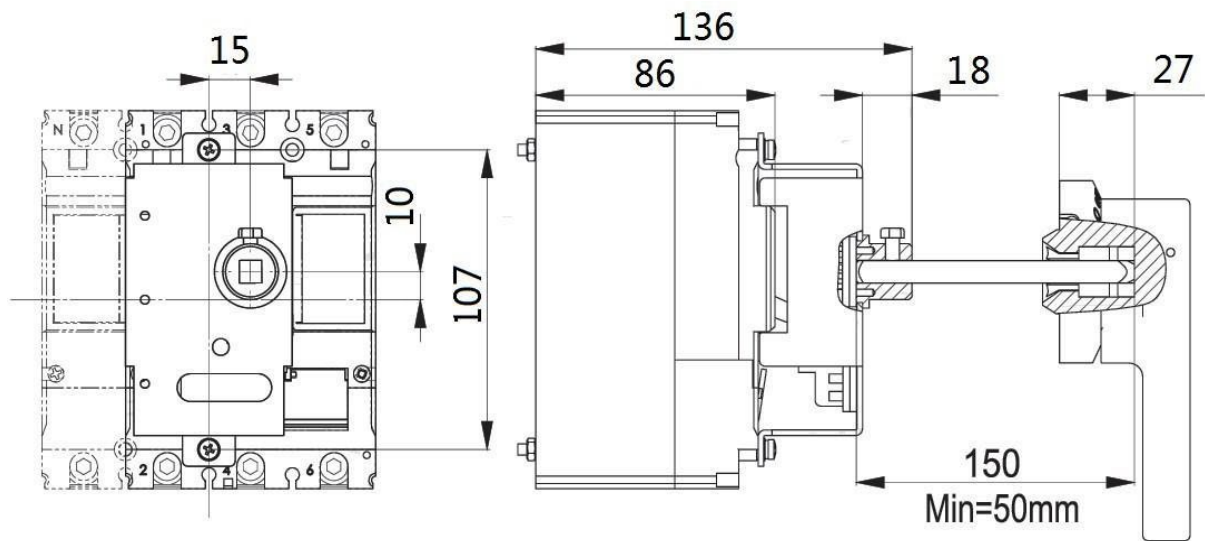


Fig.14 Installation drawing of rotary handle operating mechanism

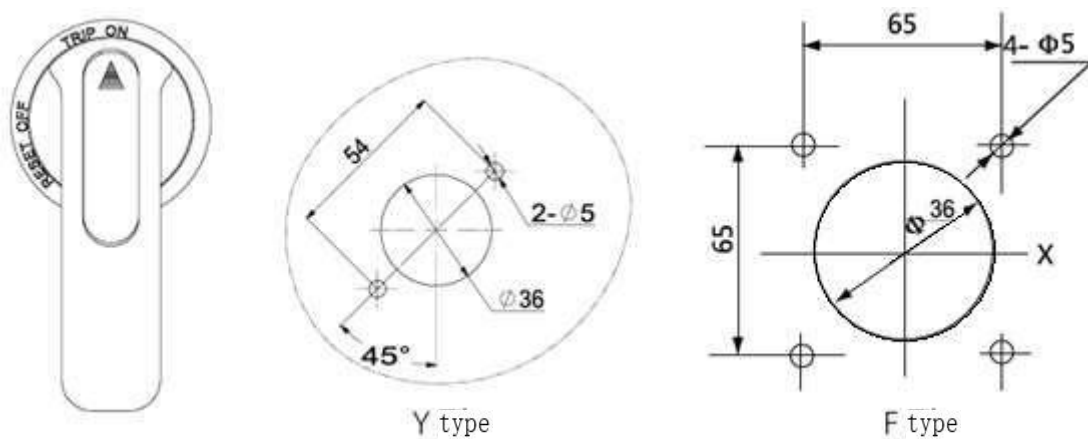


Fig.15 Installation opening diagram of rotary handle

Note:1) During manual operation, it shall rotate 180° clockwise, and counterclockwise operation is prohibited.

2) Unmarked tolerance level should follow GB/T 1804-c.

### 8.9 Electric operation

Electric operation-overall dimension of circuit breaker and its electric operating mechanism after installation:

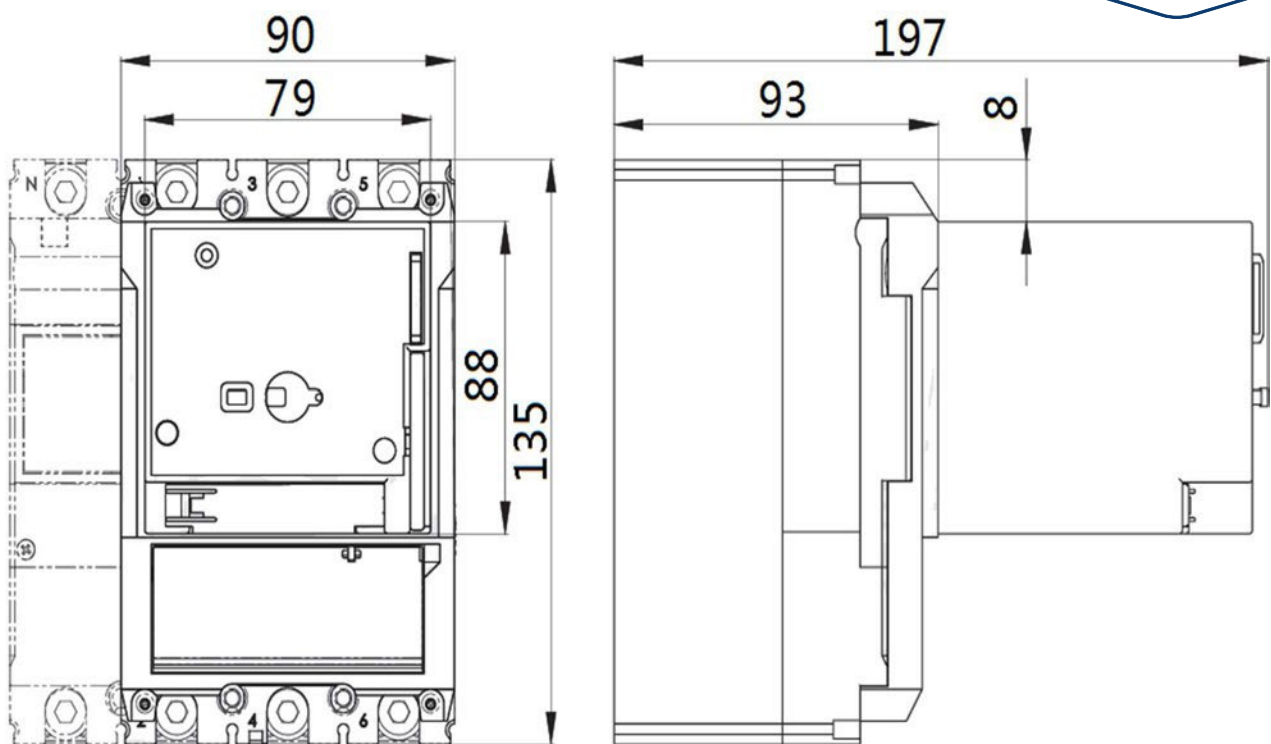


Fig.16 External dimension diagram of electric operation

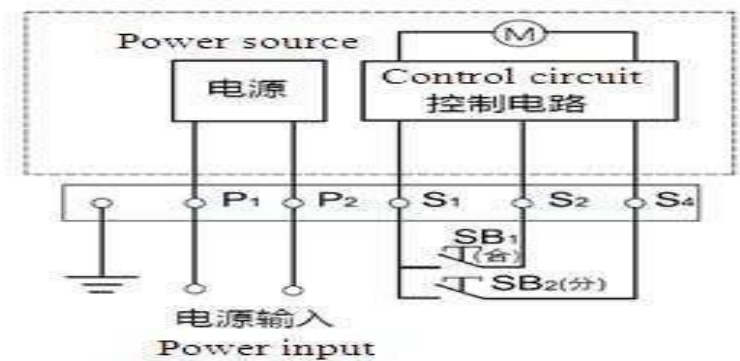


Fig.17 Electric operation wiring diagram

- Note: 1) During manual operation, 180° shall be operated clockwise, and counterclockwise operation is prohibited
- 2) P1 and P2 shall not be connected with S1 and S2 and S4 during electric operation wiring
- 3) Unmarked tolerance level should follow GB/T 1804-c.

Table 13 Voltage specification and power of electric operation

| Attachment Name       | Electric operation |               |               |        |
|-----------------------|--------------------|---------------|---------------|--------|
| Voltage specification | DC24V              | AC110V/DC110V | AC230V/DC220V | AC400V |
| power (W)             | 80                 | 150           | 150           | 200    |

8.10 Mechanical interlock

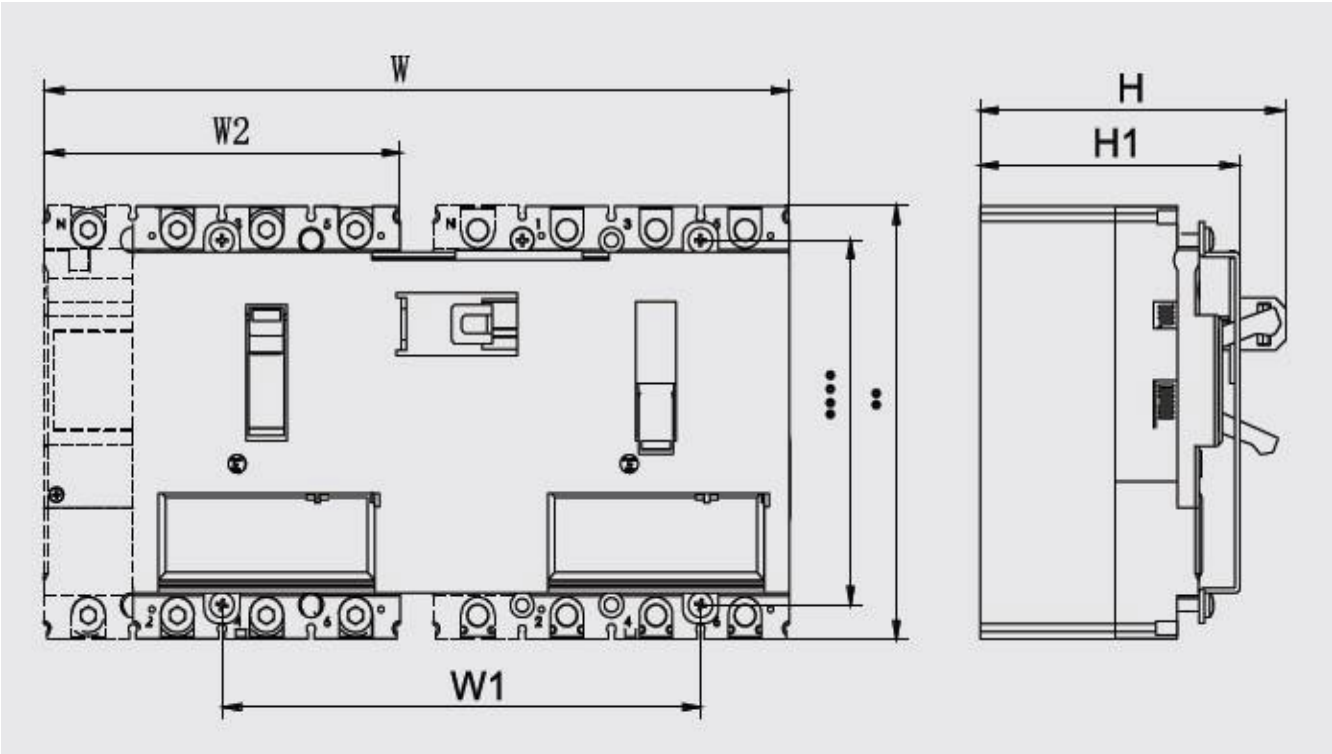


Fig.18 Outline dimension drawing of mechanical interlocking mechanism and circuit breaker after installation

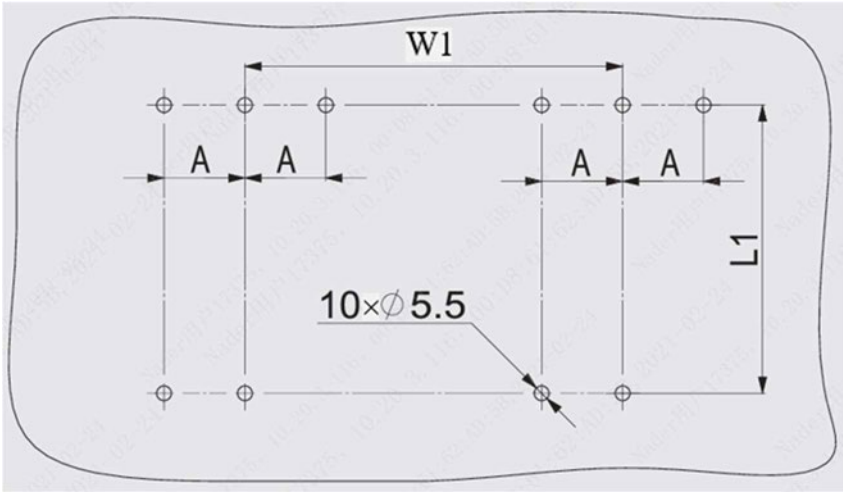


Fig.19 Installation opening dimension drawing

Table 14 Overall dimensions of mechanical interlocking mechanism and circuit breaker after installation

| mechanical interlocking mechanism | Applicable circuit breaker | W   | W1  | W2  | L   | L1  | H   | H1 | A  |
|-----------------------------------|----------------------------|-----|-----|-----|-----|-----|-----|----|----|
| JS111Y/M5-160                     | NDM5-125/3P                | 230 | 140 | 90  | 135 | 107 | 114 | 96 | 30 |
|                                   | NDM5-125/4P                | 260 | 140 | 120 | 135 | 107 | 114 | 96 | 30 |

Note: Unmarked tolerance level should follow GB/T 1804-c.

8.11 Copper bar in front of board or copper cable with wiring terminal

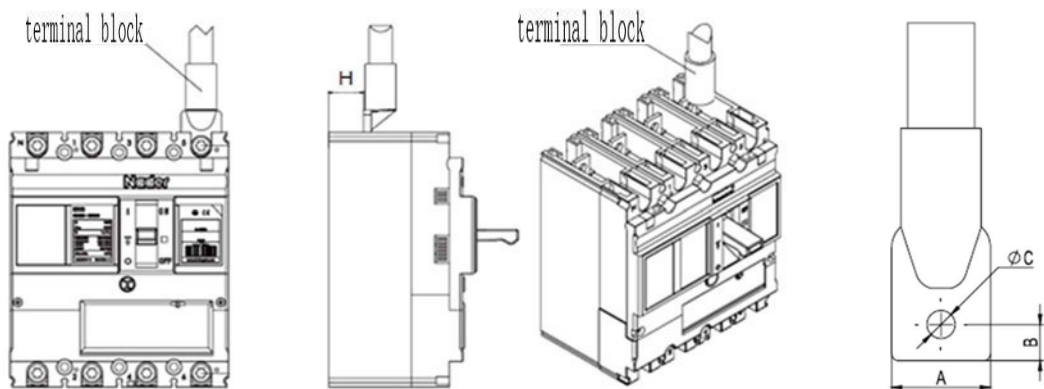


Fig.20 Connection diagram of copper bar in front of board or copper cable with wiring terminal

Table 15 Connection size of copper bar in front of board or copper cable with wiring terminal

| Model    | A(mm) | B(mm) | Φ C(mm) | H(mm) |
|----------|-------|-------|---------|-------|
| NDM5-125 | ≤12   | ≤8.5  | 6.5     | 21    |

Note: Unmarked tolerance level should follow GB/T 1804-c.

8.12 Safety distance

The minimum safety distance between the top, bottom, side and front panel when installing the circuit breaker, see the figure below.

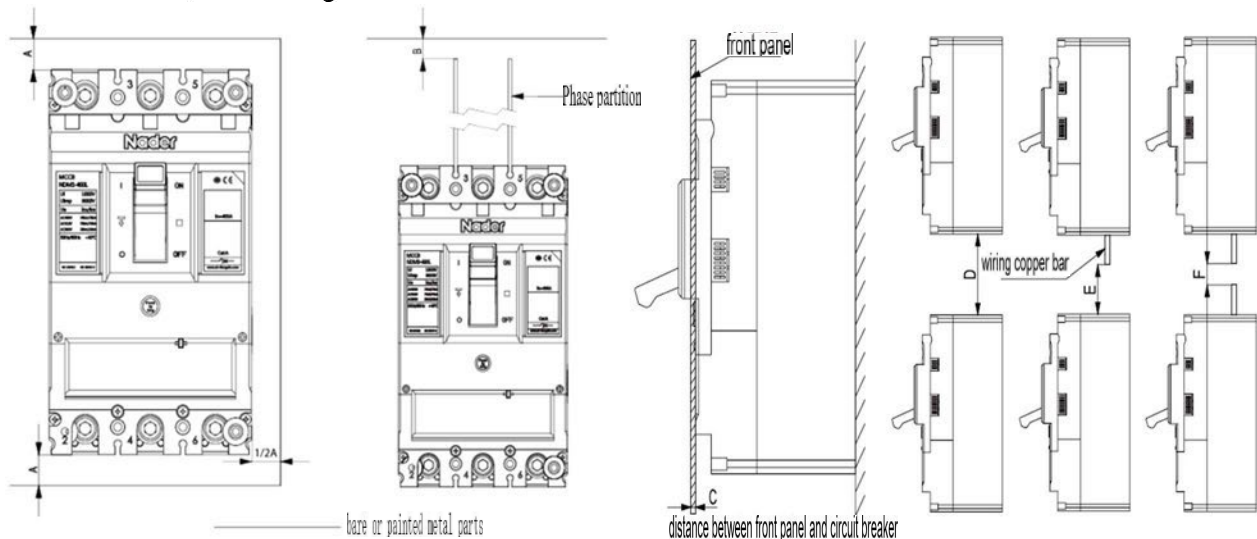


Fig.21 Insulation distance mounted in the metal cabinet

Table 16 Insulation distance mounted in the metal cabinet (unit: mm)

| Model    | Spacing A | Spacing B | Spacing C | Spacing D | Spacing E | Spacing F |
|----------|-----------|-----------|-----------|-----------|-----------|-----------|
| NDM5-125 | ≥50       | ≥0        | ≥0        | ≥100      | ≥65       | ≥35       |

Note: 1) Front panel wiring (Standard Phase partition) unit: mm

2) Unmarked tolerance level should follow GB/T 1804-c.

8.13 Wiring diagram of circuit breaker

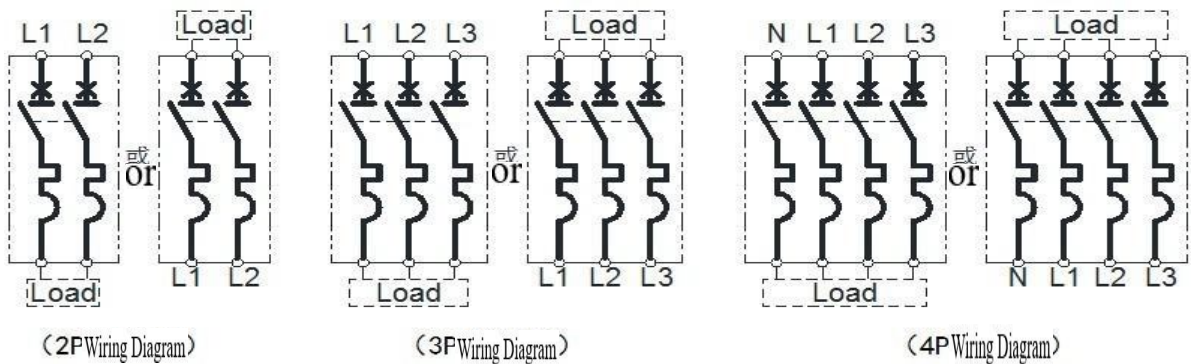


Fig.22 Main circuit wiring mode of AC products

9、Attachment function description

9.1 Under-voltage release

When the power voltage drops to the range (35%~70%) of the under-voltage release,the release can break the circuit breaker reliably; when the power voltage is 35% lower than the rated working voltage of the under-voltage release, the release can prevent closing of the circuit breaker; when the power voltage is 85% higher than the rated working voltage of the under-voltage release, the release can guarantee reliable closing of the circuit breaker.

Table 17 Rated Parameters of the Under-voltage Release

| Accessory name                 | voltage release |             | Tightening torque value of wiring screw |
|--------------------------------|-----------------|-------------|-----------------------------------------|
| Voltage specifications (V)     | AC110/DC110     | AC230/DC250 |                                         |
| Maintain power consumption (W) | 0. 5            | 1. 0        |                                         |
| Code name                      | Q11             | Q22         | 1. 2N. m                                |




Fig.23 Working diagram of under-voltage release

9.2 Under-shunt release

When the external voltage of the shunt release is between 70% and 110% of the rated control power voltage, the release can break the circuit breaker reliably.

Table 18 Rated Parameters of the Shunt Release

| Accessory name             | Shunt release |           |             |             | Tightening torque value of wiring screw |
|----------------------------|---------------|-----------|-------------|-------------|-----------------------------------------|
| Voltage specifications (V) | AC24/DC24     | AC48/DC48 | AC110/DC110 | AC230/DC250 |                                         |
| Power waste(W)             | 20            | 13        | 8           | 19          |                                         |
| Code name                  | FT02          | FT04      | FT11        | FT22        | 1. 2N. m                                |




Fig.24 Working Diagram of Shunt Release

Note: shunt tripper is working principle: it is a single pulse action。 If it needs to act again, the shunt release must be power on before it can act again.


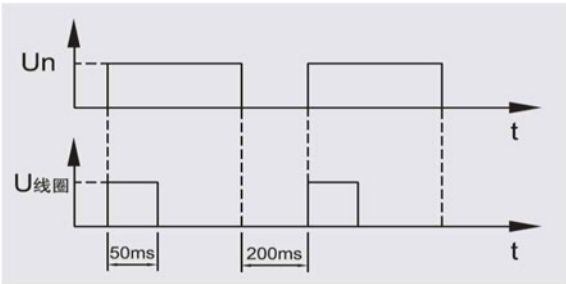


Fig.25 Working principle diagram of shunt tripper

If long-term power supply is required so that the circuit breaker cannot be closed normally, one auxiliary contact can be connected in series as shown in the figure below.

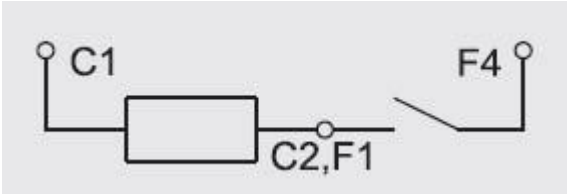

9.3 Rated parameters of the auxiliary contact

Table 19 Parameter of Auxiliary Contact



| Accessory name                                |               | Auxiliary contact (conventional)      | Auxiliary contact(Low power consumption) |
|-----------------------------------------------|---------------|---------------------------------------|------------------------------------------|
| Voltage specifications (V)/conventional (Ith) |               | AC250V/10A、AC400V/3A、<br>DC220V/0. 2A | DC30V/0. 1A                              |
| Wiring diagram                                | On, off       |                                       |                                          |
|                                               | Free tripping |                                       |                                          |
| Internal resistance                           |               | <30m Ω                                | <50m Ω                                   |

Note1): If need DC30V/0.1A Auxiliary contact, please explain when ordering.

2): The first auxiliary harness is identified as F11 (red), F12 (white), F14 (yellow), and the second auxiliary harness is identified as F21 (red), F22 (white), F24 (yellow), and so on. At most three groups of auxiliary harness are installed.

9.4 Rated parameters of the alarm contact

Table 20 Rated parameters of the alarm contact

| Accessory name                                |               | Alarm contact (conventional)                                                       | Alarm contact(Low power consumption) |
|-----------------------------------------------|---------------|------------------------------------------------------------------------------------|--------------------------------------|
| Voltage specifications (V)/conventional (Ith) |               | AC250V/10A、 AC400V/3A、<br>DC220V/0. 2A                                             | DC30V/0. 1A                          |
| Wiring diagram                                | On, off       |  |                                      |
|                                               | Free tripping |  |                                      |
| Internal resistance                           |               | <30m Ω                                                                             | <50m Ω                               |

Note 1): If need DC30V/0.1A Auxiliary contact, please explain when ordering.

2) The first alarm harness is identified as B11 (red), B12 (white), B14 (yellow).

Shunt Release、Auxiliary contact、Alarm contact , the standard wiring line is 0.7m long ,1m、2m、 4m can be customized according to requirements

10、Installation direction of circuit breaker

For vertical installation of the product, the gradient between the installation surface and the vertical plane is no more than ±22.5°.

Horizontal installation of the product.

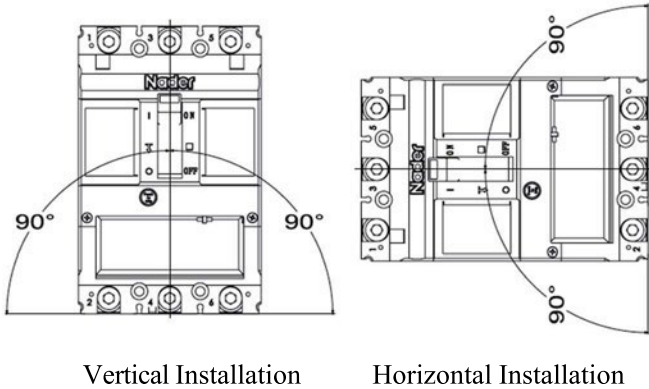


Fig.26 Mounting Method of Product

11、Packaging and storage of circuit breaker

Minimum packaging quantity: 1 piece/box. The packaged products should be stored in a warehouse with the air ventilation and the relative humidity no more than 80% when the ambient temperature is -40℃~+75℃. No acidic alkaline or other corrosive gas exists in the ambient air in the warehouse. Under the conditions above, the storage period shall be no more than three years since the manufacturing date.

## 12、Environment

The environment that comply with RoHS instruction.

## 13、Installation direction of circuit breaker

Table 21 Accessories list form

| SN | Name                       | Specification | 2P Quantity/Set | 3P Quantity/Set | 4P Quantity/Set |
|----|----------------------------|---------------|-----------------|-----------------|-----------------|
| 1  | Cross small pan-head screw | M4×75         | 2               | 2               | 3               |
| 2  | Hexagon nut                | M4            | 2               | 2               | 3               |
| 3  | Spring washer              | 4             | 2               | 2               | 3               |
| 4  | Plain washer               | 4             | 2               | 2               | 3               |
| 5  | Phase partition            | —             | 2               | 4               | 6               |
| 6  | Combination screw          | M6×18         | 4               | 6               | 8               |

## 14、Circuit breaker notes

- 1) Various characteristics and accessories of the circuit breaker are set in the factory. The circuit breaker, tripping unit or other accessories can only be adjusted, installed and maintained by the trained or qualified professionals according to the parameter requirements of the line design;
- 2) Ensure that the power supply is off before installing or removing any device;
- 3) The circuit breaker handle can be located in three positions, indicating three states: on, off and free tripping. When the handle is in the free tripping position, pull the handle in the off direction when the circuit breaker is connected and on.